AUTRONICA

Панели для систем голосового оповещения

Технические характеристики

Архангельск (8182)63-90-72 Астана +7(7172)727-132 Белгород (4722)40-23-64 Брянск (4832)59-03-52 Владивосток (423)249-28-31 Волгоград (844)278-03-48 Вологда (8172)26-41-59 Воронеж (473)204-51-73 Екатеринбург (343)384-55-89 Иваново (4932)77-34-06 Ижевск (3412)26-03-58 Казань (843)206-01-48 Калининград (4012)72-03-81 Калуга (4842)92-23-67 Кемерово (3842)65-04-62 Киров (8332)68-02-04

Краснодар (861)203-40-90 Красноярск (391)204-63-61 Курск (4712)77-13-04 Липецк (4742)52-20-81 Магнитогорск (3519)55-03-13 Москва (495)268-04-70 Мурманск (8152)59-64-93 Набережные Челны (8552)20-53-41 Нижний Новгород (831)429-08-12 Новокузнецк (3843)20-46-81 Новосибирск (383)227-86-73 Орел (4862)44-53-42 Оренбург (3532)37-68-04 Пенза (8412)22-31-16 Пермь (342)205-81-47 Ростов-на-Дону (863)308-18-15

Рязань (4912)46-61-64 Самара (846)206-03-16 Санкт-Петербург (812)309-46-40 Саратов (845)249-38-78 Смоленск (4812)29-41-54 Сочи (862)225-72-31 Ставрополь (8652)20-65-13 Тверь (4822)63-31-35 Томск (3822)98-41-53 Тула (4872)74-02-29 Тюмень (3452)66-21-18 Ульяновск (8422)24-23-59 Уфа (347)229-48-12 Челябинск (351)202-03-61 Череповец (8202)49-02-64 Ярославль (4852)69-52-93



Features

- Configurable functions and priorities
- Function buttons for starting/ stopping the prerecorded messages
- Configurable zone selection buttons to control the Fireman's Microphone
- Signalling LEDs for all function buttons and zone selection buttons
- Wall or flush mounting, rack mounting in 19" cabinet



The BR-210 is an Operator Panel for The Autro-Voice BR-200 voice alarm system, and is fully configurable when it comes to functions and priorities. It has function buttons for starting the following pre-recorded messages:

"Evacuation"

"All Clear"

"System Test"

There is also a "Reset" button that stops these messages. The LEDs will signal the active functions.

The panel is equipped with a Fireman's Microphone. This also has configurable priority, but will normally have the highest priority in the system. It will therefore always break through, during an alarm as well, to give direct messages. The zone selection buttons on the panel make it possible to broadcast messages in separate parts of the building. The zone selection buttons are individually configurable, and may cover one or several loudspeaker zones. The "All zones" button makes it possible to efficiently select all loudspeaker zones. Activated buttons are indicated with LEDs.

The panel is furthermore equipped with a physical lock that can be opened by means of a Fireman's Key.



Versions

BR-210/01: 14 loudspeaker zones BR-210/02: 6 loudspeaker zones



Technical Specifications


Distance between the operation panel and the rack unit	Max. 750 metres
Cable between the operator panel and PA rack	BRG-GZ928
Fireman's Microphone	Swan-neck version, configurable priority

Order no.	Description
BR-210/01.1	Operator panel for BR-200 with 14 loudspeaker zones
BR-210/02.1	•

System LEDs

Green	System is ready
Yellow	System is in use, but may be overridden
	by the panel
Red	System is busy or faulty, and may not be
	overridden

Dimensions

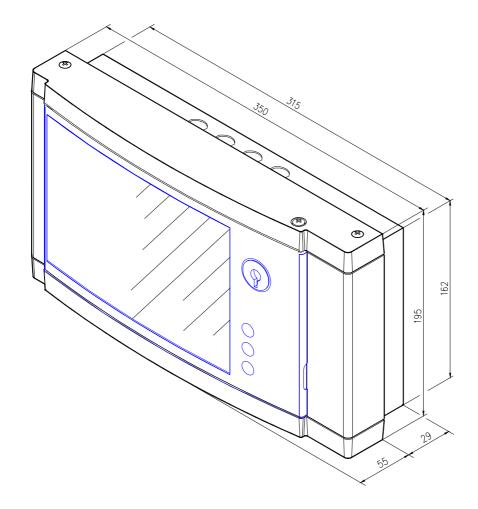

Autronica Fire and Security AS

BR-210/45 - Operator panel for BR-45

AutroVoice Product datasheet

Features

- Announcements are given the highest priority in the system
- Monitored fire brigade microphone for announcements, equipped with a spiral wire
- Function buttons used to start/stop evacuation announcements
- LED indicators that are lit during evacuation announcements, faults and power.
- On-wall and flush mounting, rack mounting in standard 19" cabinets

Description

BR-210/45 is an operator panel used in the AutroVoice BR-45 system. The panel has function buttons that are used to manually start and stop evacuation announcements. A LED indicator is lit when evacuation announcements are made. The LED indicator also indicates faults in the system. The panel provides a fireman's microphone, allowing the fire brigade to make announcements to the premises. These announcements are given the highest priority in the system, allowing the fire brigade to override everything and announce direct messages in any situation, even in an alarm situation.

The panel is equipped with a lock that is opened by means of a fireman's key.



Technical spesifications	
Maximum distance between BR-210/45 and BR-45-sentral	100 m
Cable between BR-210/45 and BR-45-sentral	BRG-GZ928 and signal cable


LED indicators	
Evacuation	Alert message running
Fault	Fault in BR-45 system
Power	230V/24V present

Buttons	
Evacuation	Start pre-recorded alert message
Reset	Stop alert message



Part number	Descriprion
116-BR-210/45	Operator panel for BR-45

Dimentions

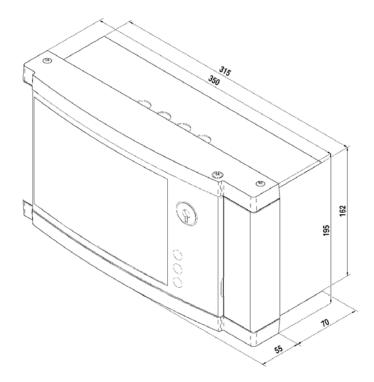



По вопросам продаж и поддержки обращайтесь:

Архангельск (8182)63-90-72 Астана +7(7172)727-132 Белгород (4722)40-23-64 Брянск (4832)59-03-52 Владивосток (423)249-28-31 Волгоград (844)278-03-48 Вологда (8172)26-41-59 Воронеж (473)204-51-73 Екатеринбург (343)384-55-89 Иваново (4932)77-34-06 Ижевск (3412)26-03-58 Казань (843)206-01-48 Калининград (4012)72-03-81 Калуга (4842)92-23-67 Кемерово (3842)65-04-62 Киров (8332)68-02-04

Краснодар (861)203-40-90 Красноярск (391)204-63-61 Курск (4712)77-13-04 Липецк (4742)52-20-81 Магнитогорск (3519)55-03-13 Москва (495)268-04-70 Мурманск (8152)59-64-93 Набережные Челны (8552)20-53-41 Нижний Новгород (831)429-08-12 Новокузнецк (3843)20-46-81 Новосибирск (383)227-86-73 Орел (4862)44-53-42 Оренбург (3532)37-68-04 Пенза (8412)22-31-16 Пермь (342)205-81-47 Ростов-на-Дону (863)308-18-15

Рязань (4912)46-61-64 Самара (846)206-03-16 Санкт-Петербург (812)309-46-40 Саратов (845)249-38-78 Смоленск (4812)29-41-54 Сочи (862)225-72-31 Ставрополь (8652)20-65-13 Тверь (4822)63-31-35 Томск (3822)98-41-53 Тула (4872)74-02-29 Тюмень (3452)66-21-18 Ульяновск (8422)24-23-59 Уфа (347)229-48-12 Челябинск (351)202-03-61 Череповец (8202)49-02-64 Ярославль (4852)69-52-93

Единый адрес для всех регионов: acn@nt-rt.ru || www.autronica.nt-rt.ru